




MOULDINGS

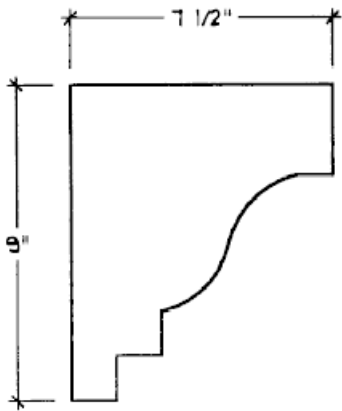


WF 401

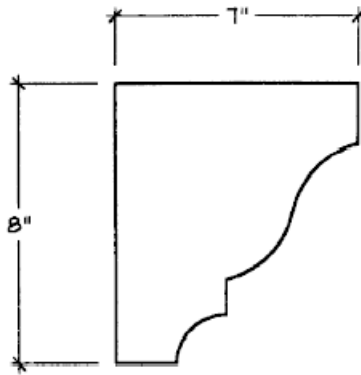


WF 402

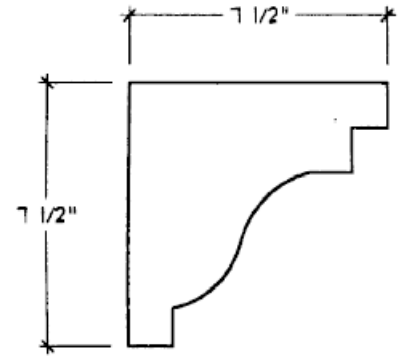


WF 403

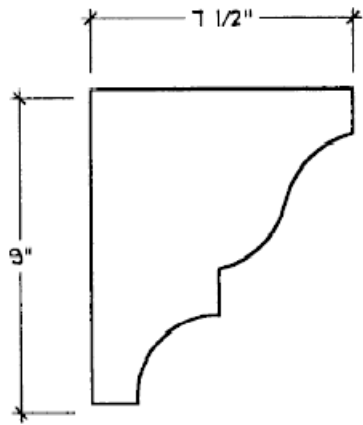


WF 404

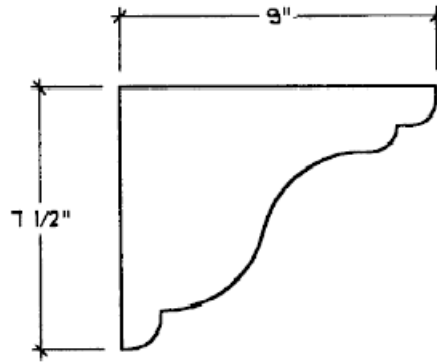


WF 405

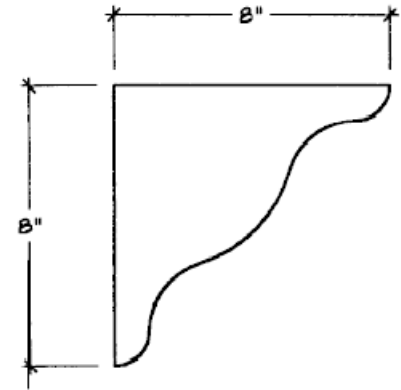


WF 406

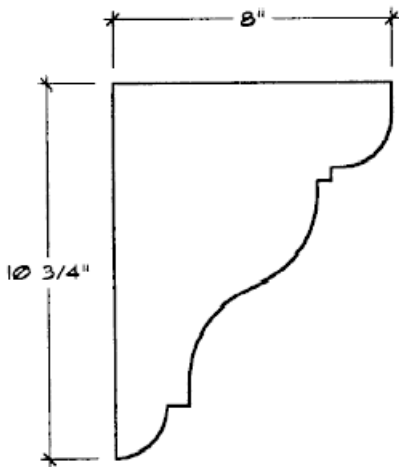

WF 407

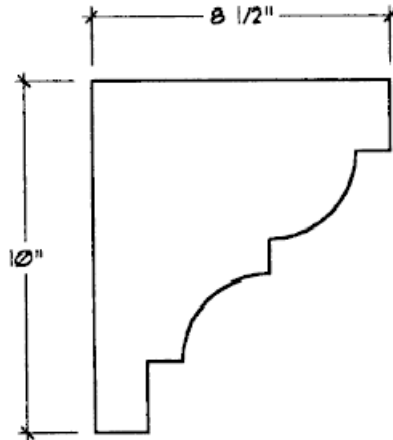


WF 408

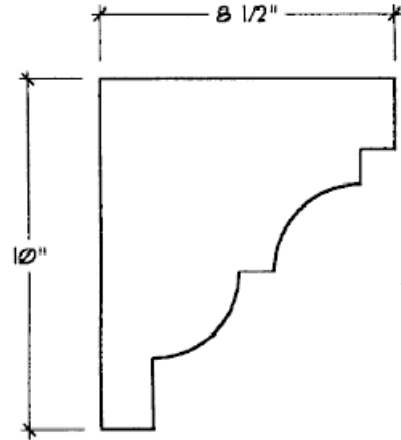


WF 409




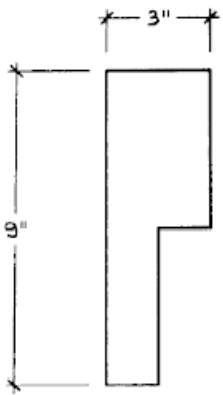


WF 901

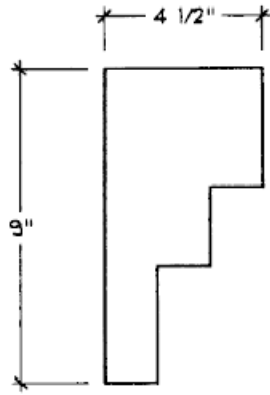


WF 902

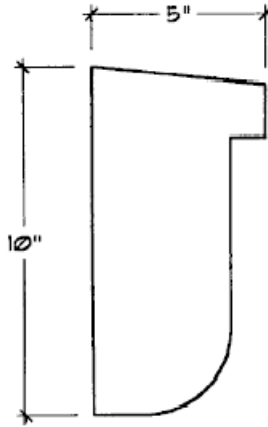


WF 903

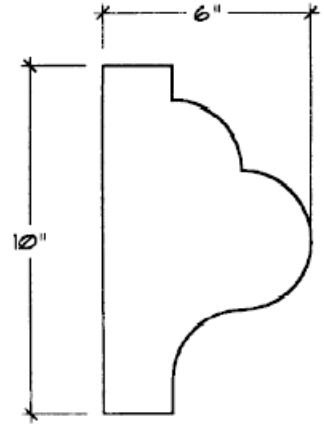


WF 904

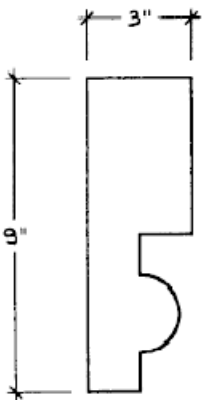


WF 905

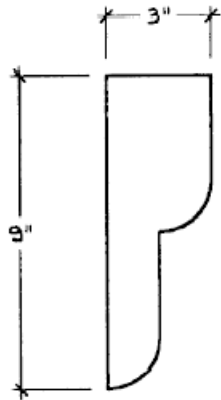


WF 906

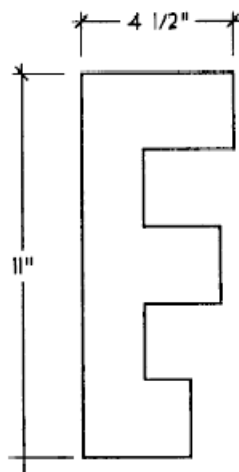


WF 907

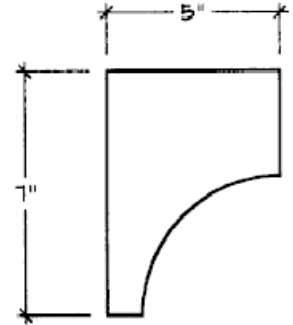


WF 908

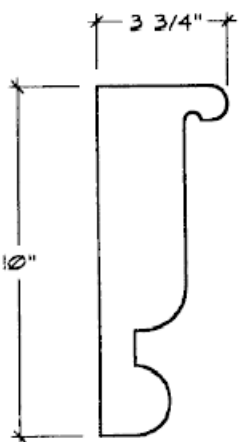


WF 909

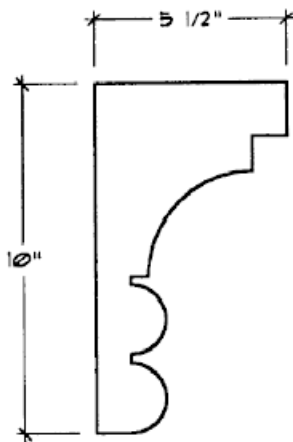

WF 910

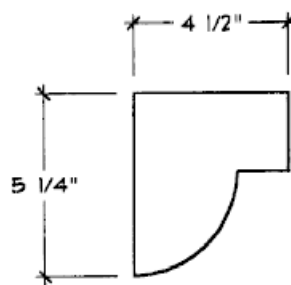

WF 911

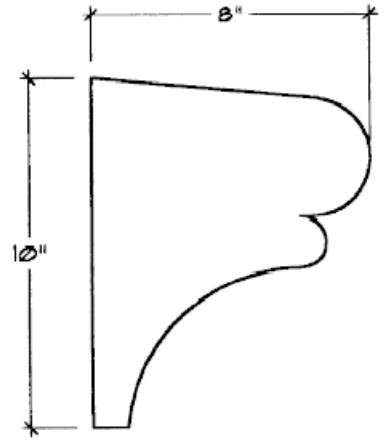

WF 912